

150mm (6") OUTLINE RAISED BED INSTRUCTIONS

Kit contents for 1m x 1m & 1.25m x 1.25m Standard Raised Beds:

- Planks
- Rigid corner connectors
- Locking pins and caps

Kit contents for all other sizes of Standard Raised Bed:

- Planks
- Rigid corner connectors
- Flexible connectors
- Connector pins and caps for flexible connectors (Note: flexible connectors should come pre-assembled – if not, simply attach the two connector pieces together, put the pin in the middle to secure, and seal with a cap)
- Locking pins and caps

1. Choose a good location for the bed – fairly flat ground is best. We recommend pre-preparing the soil, particularly where the locking pins are located, which will make it easier to push the pins into the ground. (Note: pushing pins into the ground is an optional step that gives the bed extra stability. If not applicable, simply push pins to the bottom of the planks and cut off the excess)

For 1m x 1m & 1.25m x 1.25m beds...


2. Push rigid connectors into one end of each plank, making sure the connector tabs and plank divisions line up correctly. If necessary, turn planks over so that the connector sits flush with the upper surface of the plank.

For all other sizes of raised bed...

2. Use the flexible connectors to connect planks together for the long sides of your raised bed. Use the rigid connectors
3. For the corners of your raised bed – one in each corner. Make sure the connector tabs and plank divisions line up correctly. If necessary, turn planks over so that the connector sits flush with the upper surface of the plank.
4. Connect planks together to form the raised bed. Ensure the holes in the plank line up with the gaps in the connector – this will allow the locking pin to pass through both the planks and the connectors and lock the bed in place
5. Push locking pins through the holes in the planks, pointed end first. Gently tap locking pins into the soil using a wooden mallet or similar. Tap until the pin is level with the top of the plank. If one end of the pins are not already chamfered, you can do this with a Stanley knife or file.
6. Press the locking pin caps into the top of each locking pin

Tips:

- Preparing the soil beforehand will make it easier to drive locking pins into the ground
- For use on hard standing or a patio, push pins to the bottom of the planks and cut to length using a saw or knife
- Ensure that the connectors are properly located in the planks before inserting locking pins. Failure to do so may cause damage to the components
- Additional components are available for extending the area or increasing the height of your bed. Please contact us
- All components are weatherproof but can be easily stored during winter. For best storage conditions, dismantle the bed and wash and dry the parts. Store vertically to allow water run-off
- Note: beds are made from part-recycled material and may have surface scratches – these do not affect performance

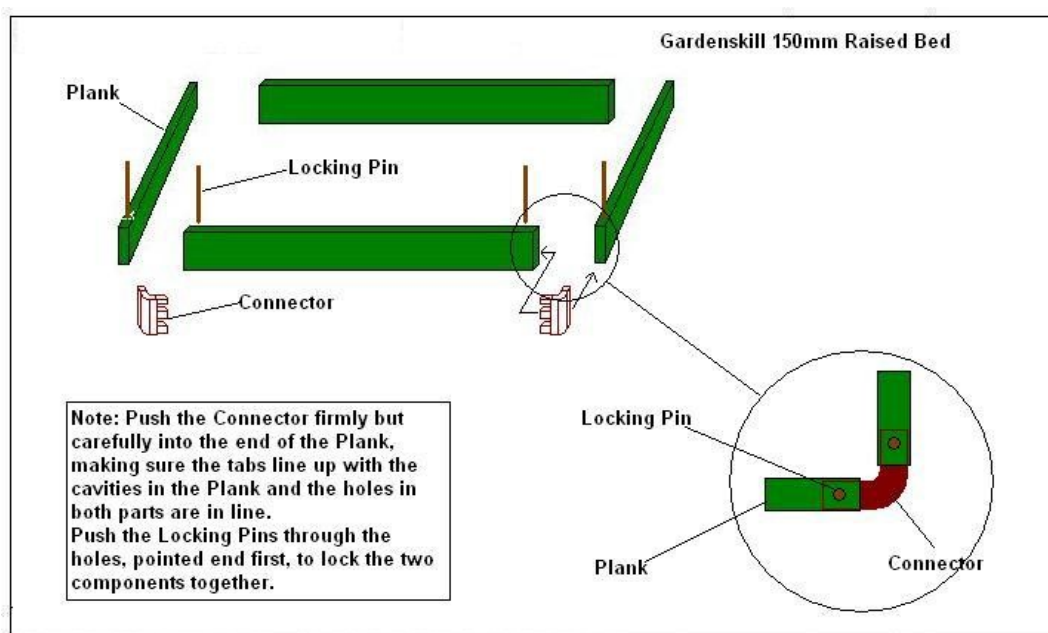

2 in 1 Raised Bed Liner / Cover



Each one fits inside or outside into a 1 metre or 1.25 metre section raised beds

Made from HD Woven PP

Liners have irrigation holes for drainage

15cm High x 100cm x 100cm - GRL150-01 - £7.99

15cm High x 125cm x 125cm – GRL150-08 – £8.99

www.gardenskill.com